 


Thank you for choosing a Ferzil wood stove. I hope it will serve you well on all your bivouacs.



READ THESE INSTRUCTIONS CAREFULLY BEFORE USING THE DEVICE. Failure to follow the instructions contained in this manual may result in serious injury or death, or a fire or explosion that could cause damage to property. KEEP THIS USER MANUAL with the stove. If the stove is used by a third party, this instruction manual must be provided to them.

Figure 1

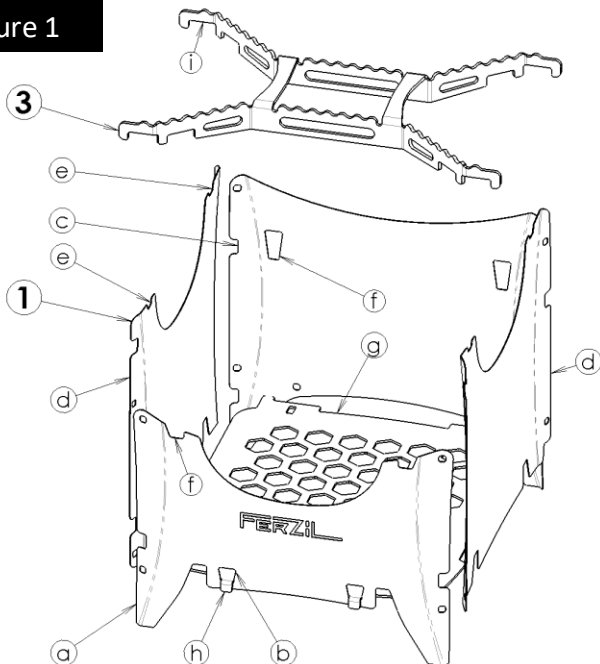

- 1) Stove
 - a) Front panel
 - b) Front slots (x2)
 - c) Rear panel
 - d) Side panels (x2)
 - e) Upper slots (x4)
 - f) Lower slots (x4)
 - g) Air intake grate
 - h) Locking tabs
- 2) User manual
- 3) support (visual according to option)
 - i) Slots (x4)

Figure 2


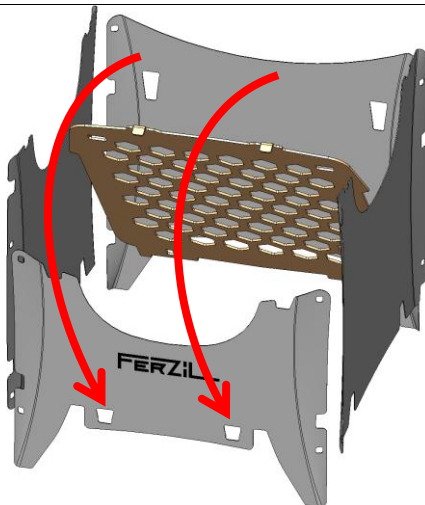


Figure 3

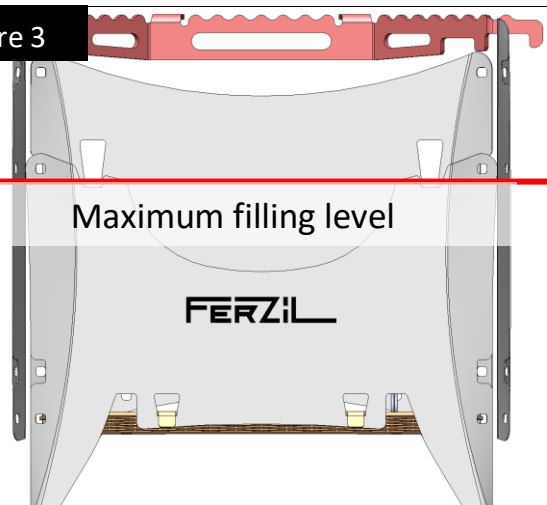

Assembly (Figure 2):

1. Unfold the front panel until the four side panels form a square.
2. Unfold the air intake grate (1g).
3. Insert the two locking tabs (1h) into the front slots (1b).
4. Place the support crosspiece (3) on the stove (1).
5. Place your pot or frying pan in the center of the stove. Do not exceed the maximum permitted load.

Do not use the stove if all its parts are not in place. Check that the grill is properly attached to the front panel.

For the Ferzil 9 only: the pot must have a minimum diameter of 8 cm.

Fold the stove in the reverse order of assembly, starting by lifting the air intake grate (g) against the rear panel (c).

Depending on the model, the following accessories are available: carrying pouch, cooking support, windscreen and ash tray.

Fuel filling:

The fuels that may be used are wood and charcoal (complying with ISO NF 1860-2).

Wood pieces must not exceed 2 cm in diameter.

The drier the wood, the better the combustion.

The maximum fuel level must not exceed the bottom of the lower slot (Figure 3).

Warning! Do not use spirit or petrol for lighting or relighting.

For Ferzil 13 and 18 only: when the cooking support is in the low position, the fuel must not extend above the bottom of the front slot.

Maintenance:

Cleaning with water is sufficient. A steel-wool scouring sponge is ideal.

After the first few uses, slight warping of the panels may occur. This should not increase afterwards.

Lightly oil the air intake grate to prevent corrosion. Clean before storage. Store in a dry place.

Operating instructions:

Do not place food directly on the support (3).

The stove must be installed on a horizontal, stable, and non-combustible surface.

The stove has protruding parts. Handle with care.



Before using, ensure that local regulations allow the use of fire or stove.

Do not use the stove within 5 meters of a tent, house, combustible material or any other flammable object.



WARNING! Do not use indoors, confined and/or habitable space, for example houses, tents, caravans, camper vans, boats. Risk of death from carbon monoxide poisoning.

Do not pour water onto hot charcoal. This may create steam and cause serious injury.



WARNING! Do not touch the stove with your hands during use and when cooling it. Do not move it during operation. The flames may extend up to one metre above the stove. In case of wind, be attentive, the flames will be larger and stronger.

Do not wear clothing with loose, loose sleeves when lighting and using the stove.

Once you have finished using the stove, make sure the fire is completely extinguished. Make sure that the stove and its surroundings are properly cooled. Ashes must be removed after each use.



WARNING! Keep children and pets away. Never leave the stove unattended during use. Keep cables and electrical cords away from stove and areas where people may walk. Always keep suitable fire-extinguishing equipment nearby.

Warranty:

This stove is covered by a 2-year warranty from the date of purchase. The warranty applies if the product delivered does not conform to the order or if it is found to be defective. The stove must be returned prepaid, complete and not disassembled. Please indicate the nature of the defect observed. The warranty does not apply if the damage results from improper use or storage of the stove, inadequate maintenance, repair, modification, or the use of non-original replacement parts..

Designed, manufactured and assembled in France. In the interest of continuous improvement, modifications may be made without prior notice.

Specifications:

model	9	10	13	18
Unfolded dimensions (cm) Width x depth x height	10 x 10 x 12	10 x 10 x 13	14 x 14 x 14	18 x 18 x 13
Folded dimensions (cm) Height x width x thickness	12 x 10 x 1	15 x 10 x 1	14 x 14 x 1	13 x 18 x 1
Firebox volume	0,7 L	0,7 L	1,5 L	1,6 L
Firebox vol. with cooking support in low position	-	-	1 L	1,2 L
Maximum load on top	2 Kg	2 Kg	3 Kg	4 Kg
Heating capacity [litres of water]	1 L	1 L	2 L	3 L
Material and thickness of side panels	inox 301 3/10 mm	inox 304 8/10 mm	inox 301 3/10 mm	inox 304 8/10 mm
Material and thickness of air intake grate	Acier 1mm	Acier 1mm	Acier 1mm	Acier 1mm
Crosspiece/support material	-	inox 304 1,5mm	inox 304 1,5mm	inox 304 1,5mm
Weight of stove only	98 gr	250 gr	220 gr	540 gr
Weight of crosspiece/support	-	40 ou 65 gr	40 ou 65 gr	105 gr

FERZIL®

Sylvain POUPARD

micro entreprise **atelier FERZIL**

n° de siret : 948 629 266 00016

9 rue de la Coran

44400 Rezé FRANCE

rechaud.ferzil@free.fr

ferzil.fr



[rechaud.ferzil](https://www.facebook.com/rechaud.ferzil)



[rechaud ferzil](https://www.instagram.com/rechaud_ferzil)